

# Quick Tuning Table for N10-L5

Base Setting for Proctor and M7+



KEI TAKAKUWA  
 kei@jp.northsails.com  
<http://www.northsails.com/jp>

TEL +81-45-770-5666  
 FAX +81-45-773-5222

Mast rake	6730-50mm
Pre bend	60mm-70mm for Base Setting
Fore tention	PT-1 25-27      LOOSE A 35-37
Side tention	PT-1 34-36      LOOSE A 41-42.5      3mm wire
Spreader	470mm (for Mackay boat),480mm (for Zeagelmayer boat) ,10-15mm shorter for light weight crew
Mast step	3090-3100mm (from back end of the mast groove to back end of the boat)

Base Setting

<b>N10-L5</b>	0-6 kt	6-11 kt	12-14 kt	15-17 kt	18-21 kt	22kt-
Mast rake	6730-6750mm	6730-6750mm	6690-6710mm	6650-6670mm	6610-6630mm	6500-6560mm
Pre bend	70-80mm Reverse Chock	60-70mm	Keep the same spreader deflection			Close the spreader to increase 5-10 mm more prebend
Rig Tension	Max	Max	control in between 23-26 in jib wire tension with Loose PT-1 Black Gage			Keep Rig Tension at the Lowest
Deck Chock	-1	0(no vang)	1(with vang)	1 - 2		