

Quick Tuning Table for N9-L5 & S5-B4

Base Setting for Proctor and M7+



NORTH SAILS

KEI TAKAKUWA
kei@jp.northsails.com
<http://www.northsails.com/jp>

TEL +81-45-770-5666
FAX +81-45-773-5222

Mast rake	6720-40mm
Pre bend	50mm(45-55mm) for Base Setting
Fore tention	PT-1 25-26 LOOSE A 34-36
Side tention	PT-1 34-36 LOOSE A 41-42.5
Spreader	480mm (470mm for light weight crew)
Mast step	3090-3100mm

N9-L5	0-7 kt	8-12 kt Crew on the wire	13-18 kt	18-22 kt	22- kt
For light weight crew	0-7 kt	8-10 kt Crew on the wire	11-14 kt	14-18 kt	18- kt
Mast rake	6720-6740mm	6720-6740mm	6680-6710mm	6640-6680mm	6600-6640mm
		Base Setting	You can change the rig tension in between 24- 26 forestay tension by PT-1 according to the conditions	→	
Pre bend	60-70mm	Keep 50mm to be controled by Spreader			more than 65mm
Deck Chock	By closing the spreader or chock the mast forward at the deck	0-1 chock from the neutral position	0-2 chocks from the neutral position	0-1 chock from the neutral position	→

S5-B4

Jib luff tension	Obvious wrinkles	Slight wrinkles	Just remove wrinkles	Remove wrinkles completely	Tighter
------------------	------------------	-----------------	----------------------	----------------------------	---------