

# SW3 Quick Tuning Table

For Sidewinder Gold




**NORTH SAILS**

North Sails Japan Inc.

info@jp.northsails.com  
http://www.northsails.com/jp

TEL +81-45-770-5666  
FAX +81-45-773-5222

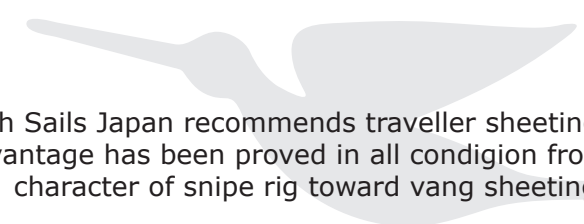

North Sails Japan recommends traveller sheeting. Advantage has been proved in all condigion from character of snipe rig toward vang sheeting.

Base setting

1st Mast rake	6400-6430mm	2nd Mast rake	6530-6550mm
Pre bend	45-55 mm	1st Rake is 6430mm where the rig is just leaning forward against the shrouds. 2nd Rake is 6550mm where the jib halyard is pulled on to the sailing tension.	
Fore tension	4-8 (PT-1)		
Side tension	15-18 (PT-1)		
Spreader length	450-470mm		
Spreader swing	680-720mm		
Mast step	1524-1550mm from Bow Stem		

Basic trim

SW3		0-6 kt	7-9 kt	10-12 kt	13-15 kt	16-18 kt	19-22 kt	23 kt over
Mast rake	Traveller	6530-6580mm	6530-6550mm				6490-6520mm	
Mast position		25mm forward	10mm forward	Neutral	Free			
Mast rake	Vang	6550-6580mm	6530-6550mm		6500-6530mm		6470-6500mm	
Mast position		25mm forward	10mm forward	Neutral	15mm aft	Neutral		
Cunningham		Obvious wrinkle	Wrinkle	Slight wrinkle	Smooth	Tight		
Main Tack		15mm from mast			10mm	0mm		
Out haul		30mm	20mm	10mm from black band			Tight	
Jib leader		Base position			15-30mm aft			40mm aft
Jib tack		Obvious wrinkle	Wrinkle	Slight wrinkle	Smooth	Tight		